




# Installation Instruction

Overhead sectional door  
Retractable Photocells

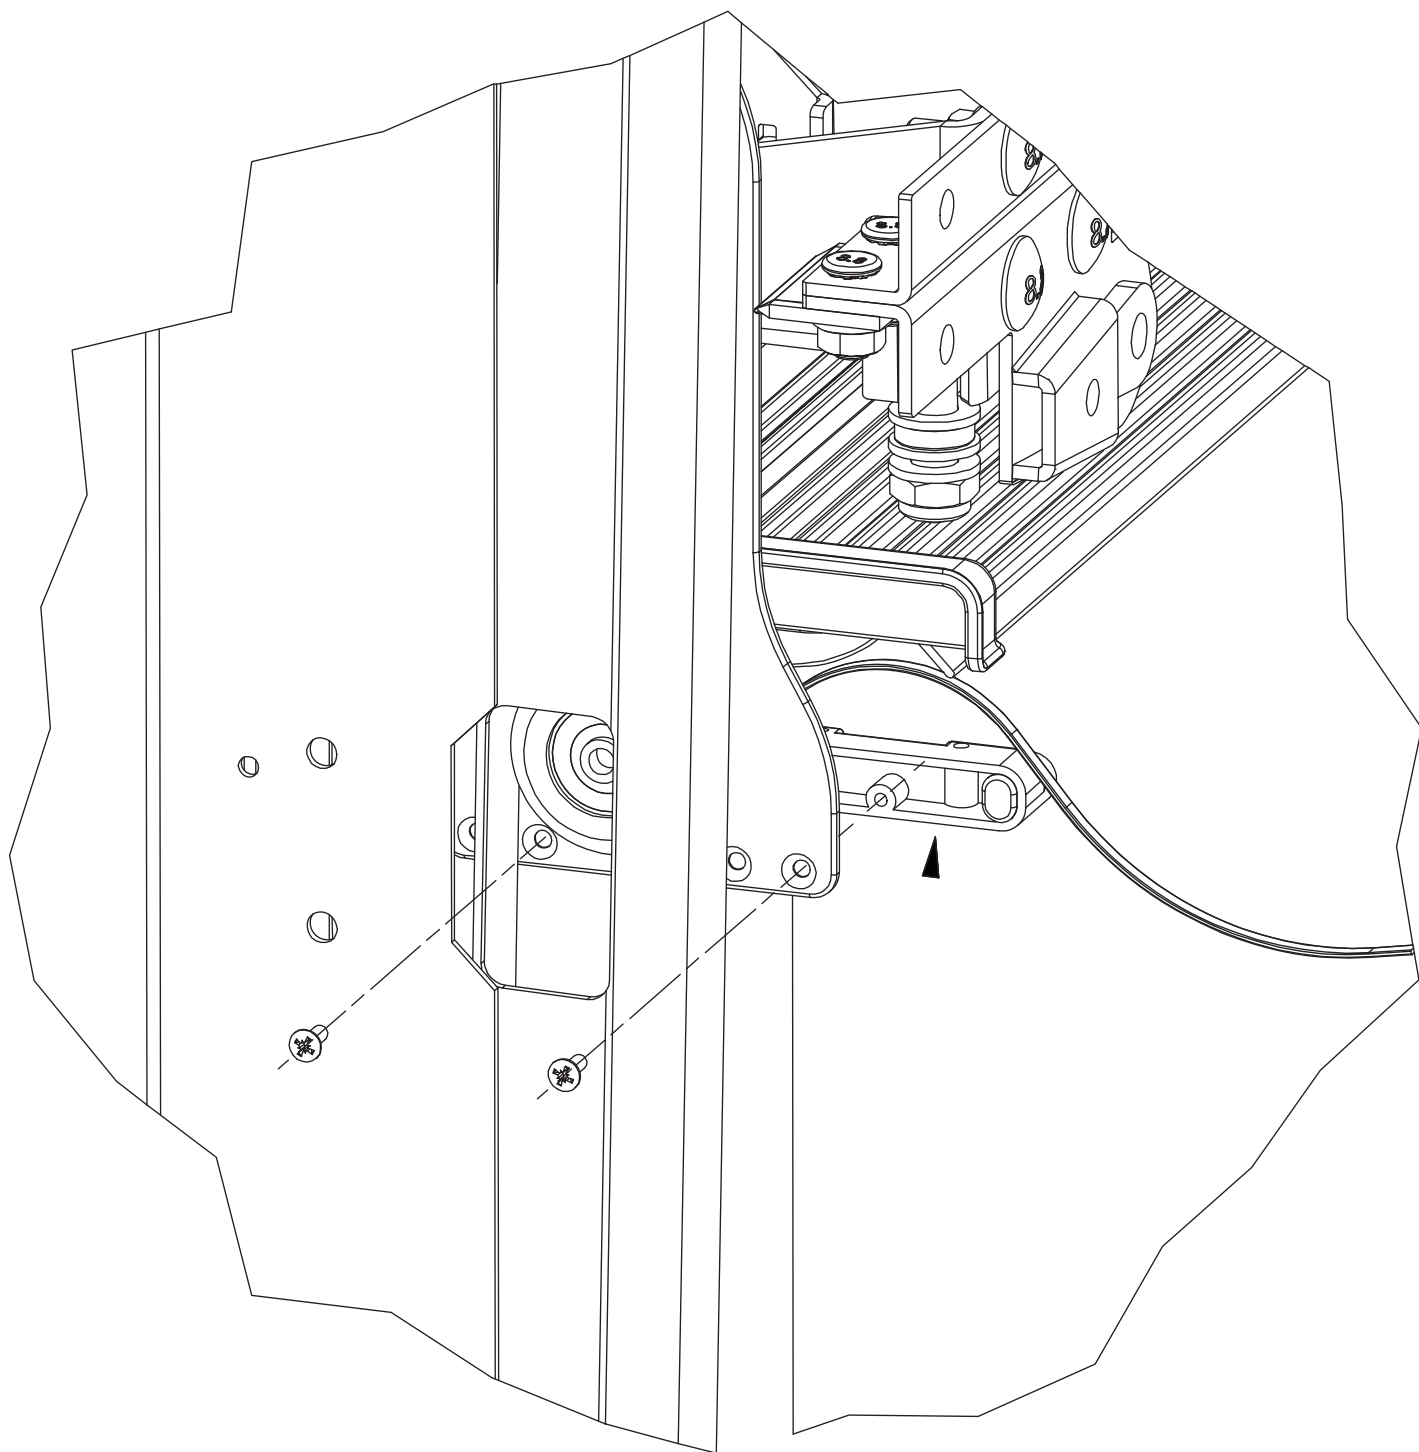


Installation Instruction  
Overhead sectional door  
Retractable Photocells


For LL and SL hardware, create a virtual HL of 380 mm by moving the buffers forward, resulting in a reduced effective DLH.

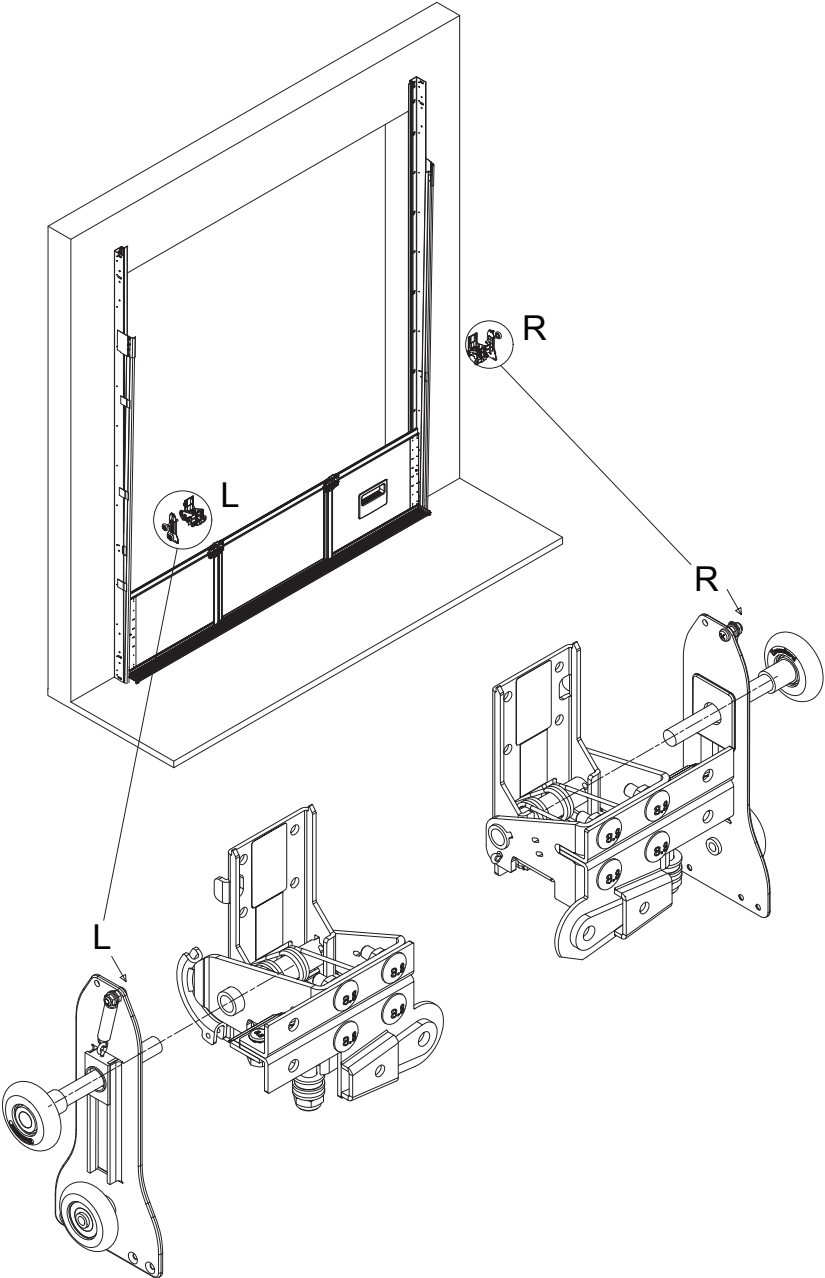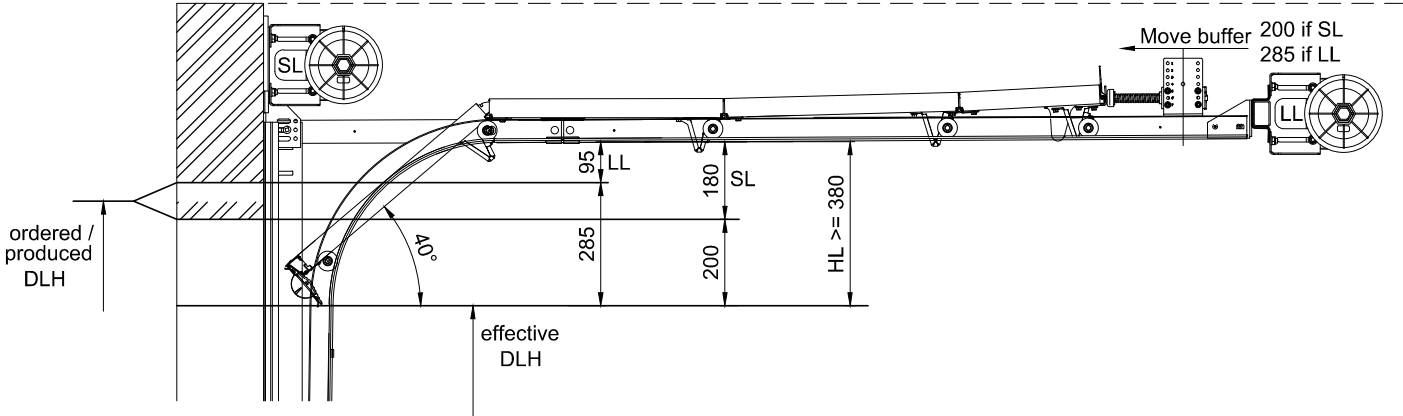


Installation Instruction  
Overhead sectional door  
Retractable Photocells

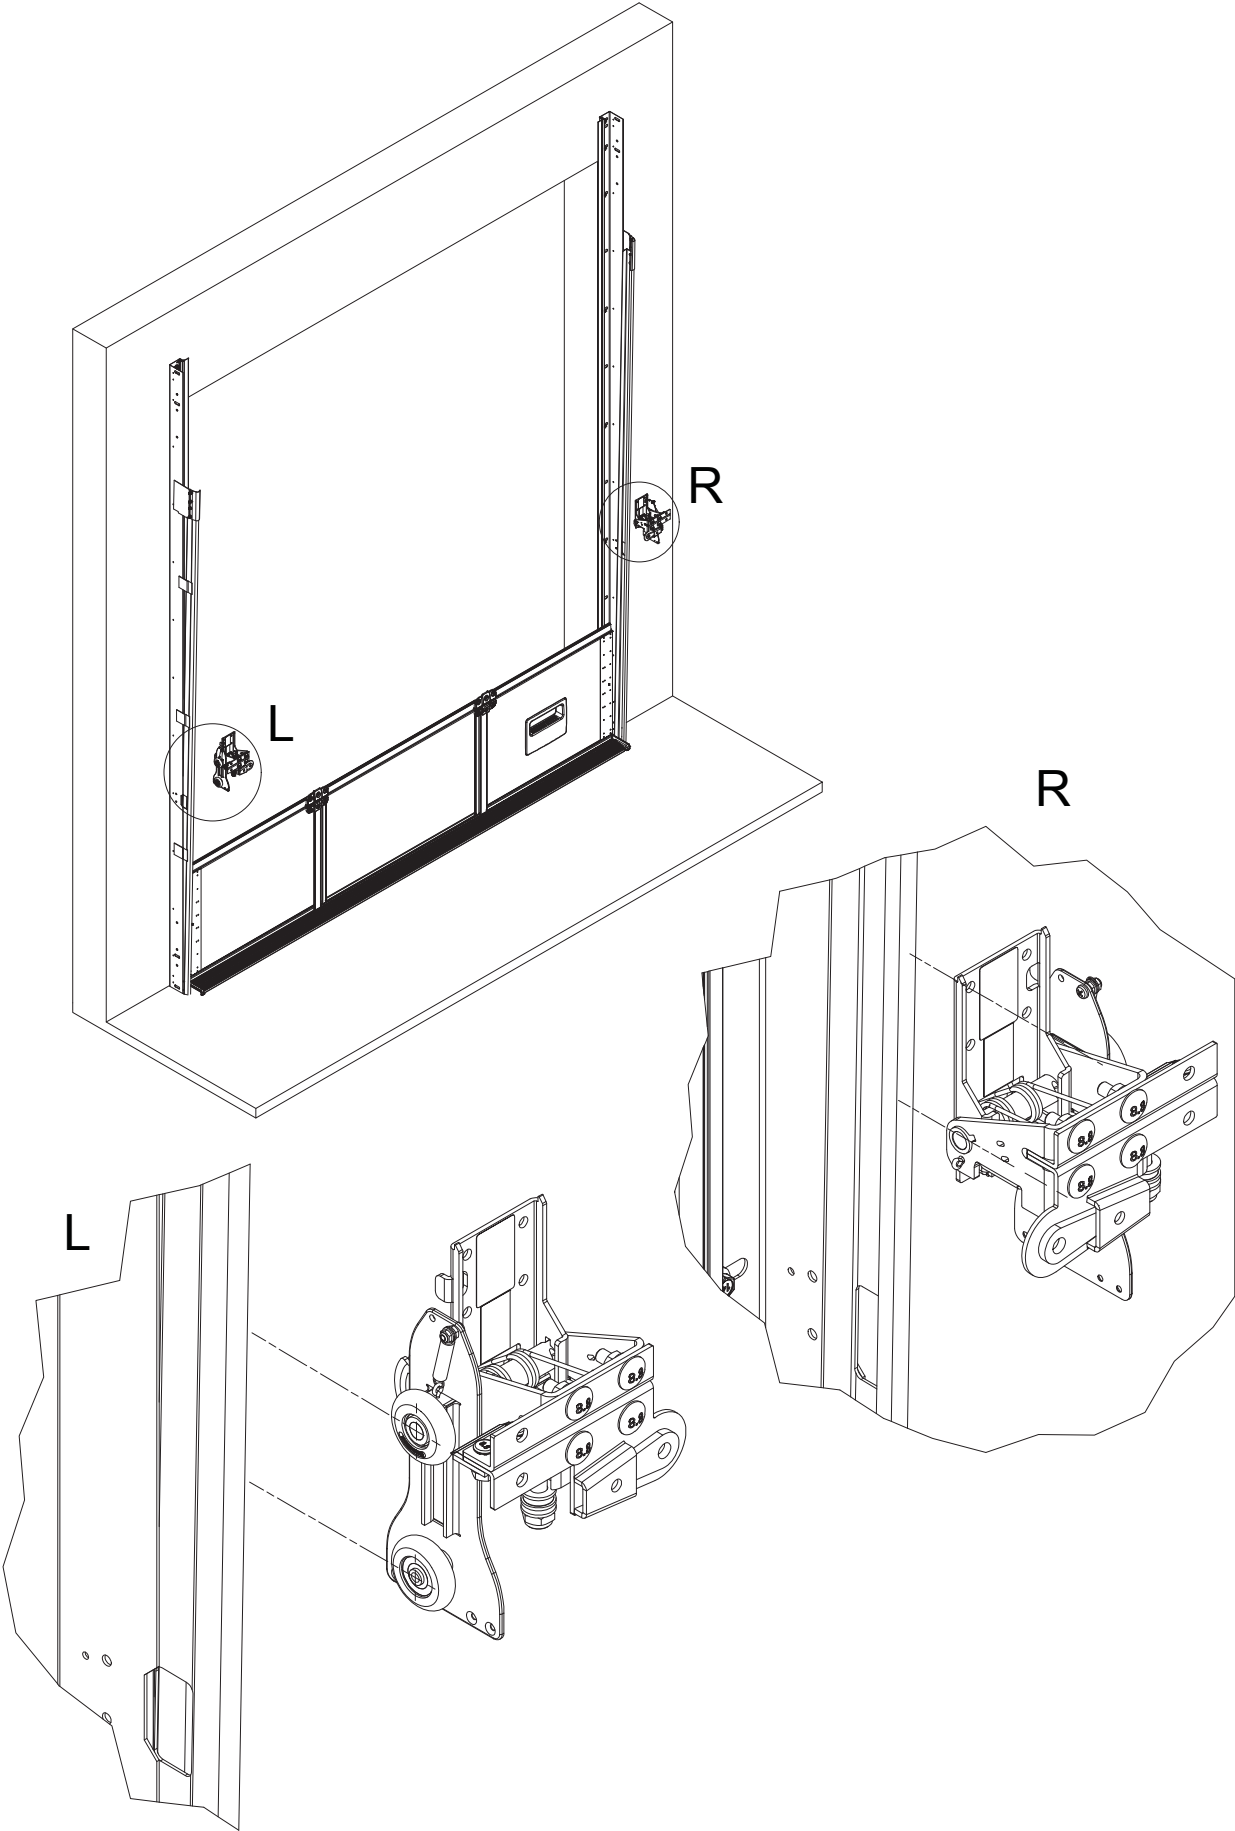





Installation Instruction  
Overhead sectional door  
Retractable Photocells

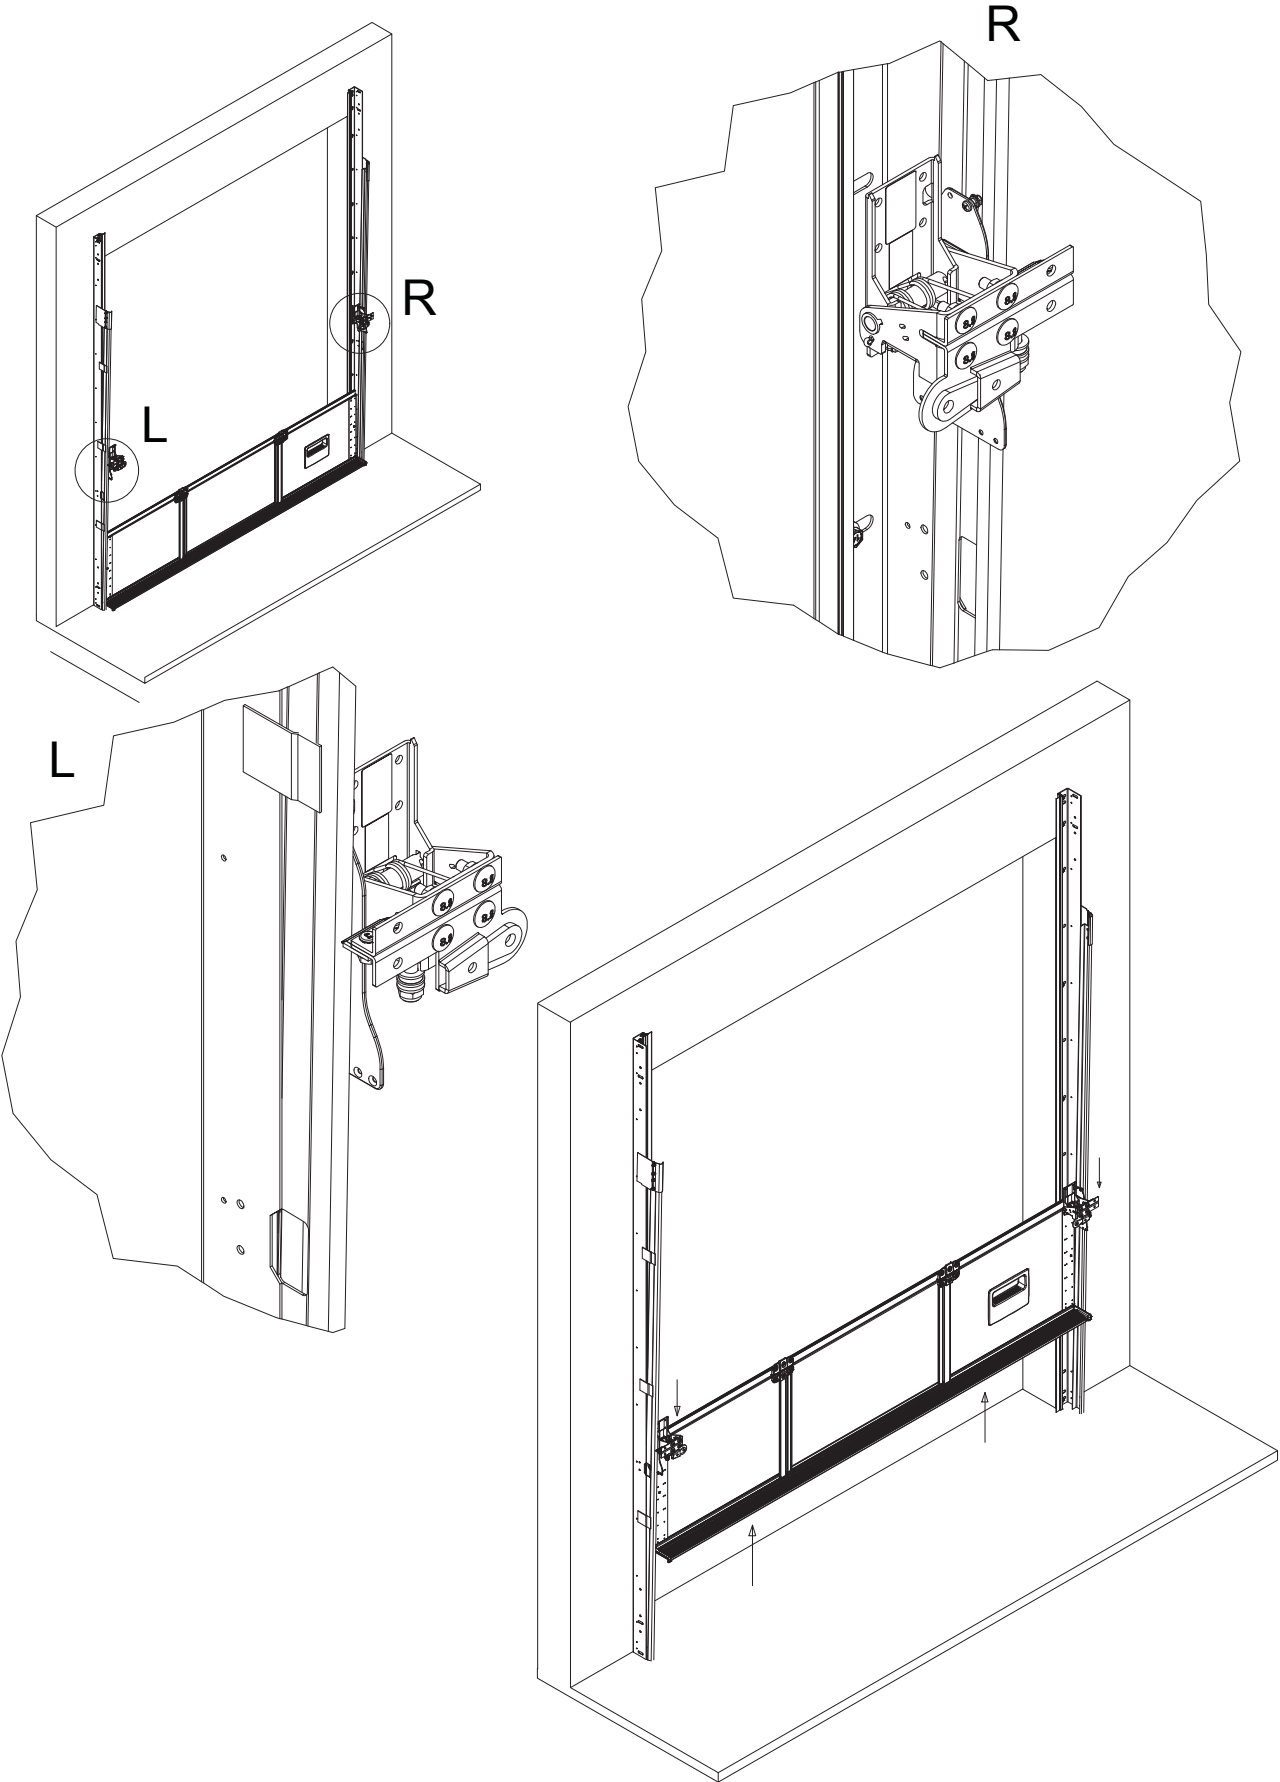

Installation Instruction  
Overhead sectional door  
Retractable Photocells

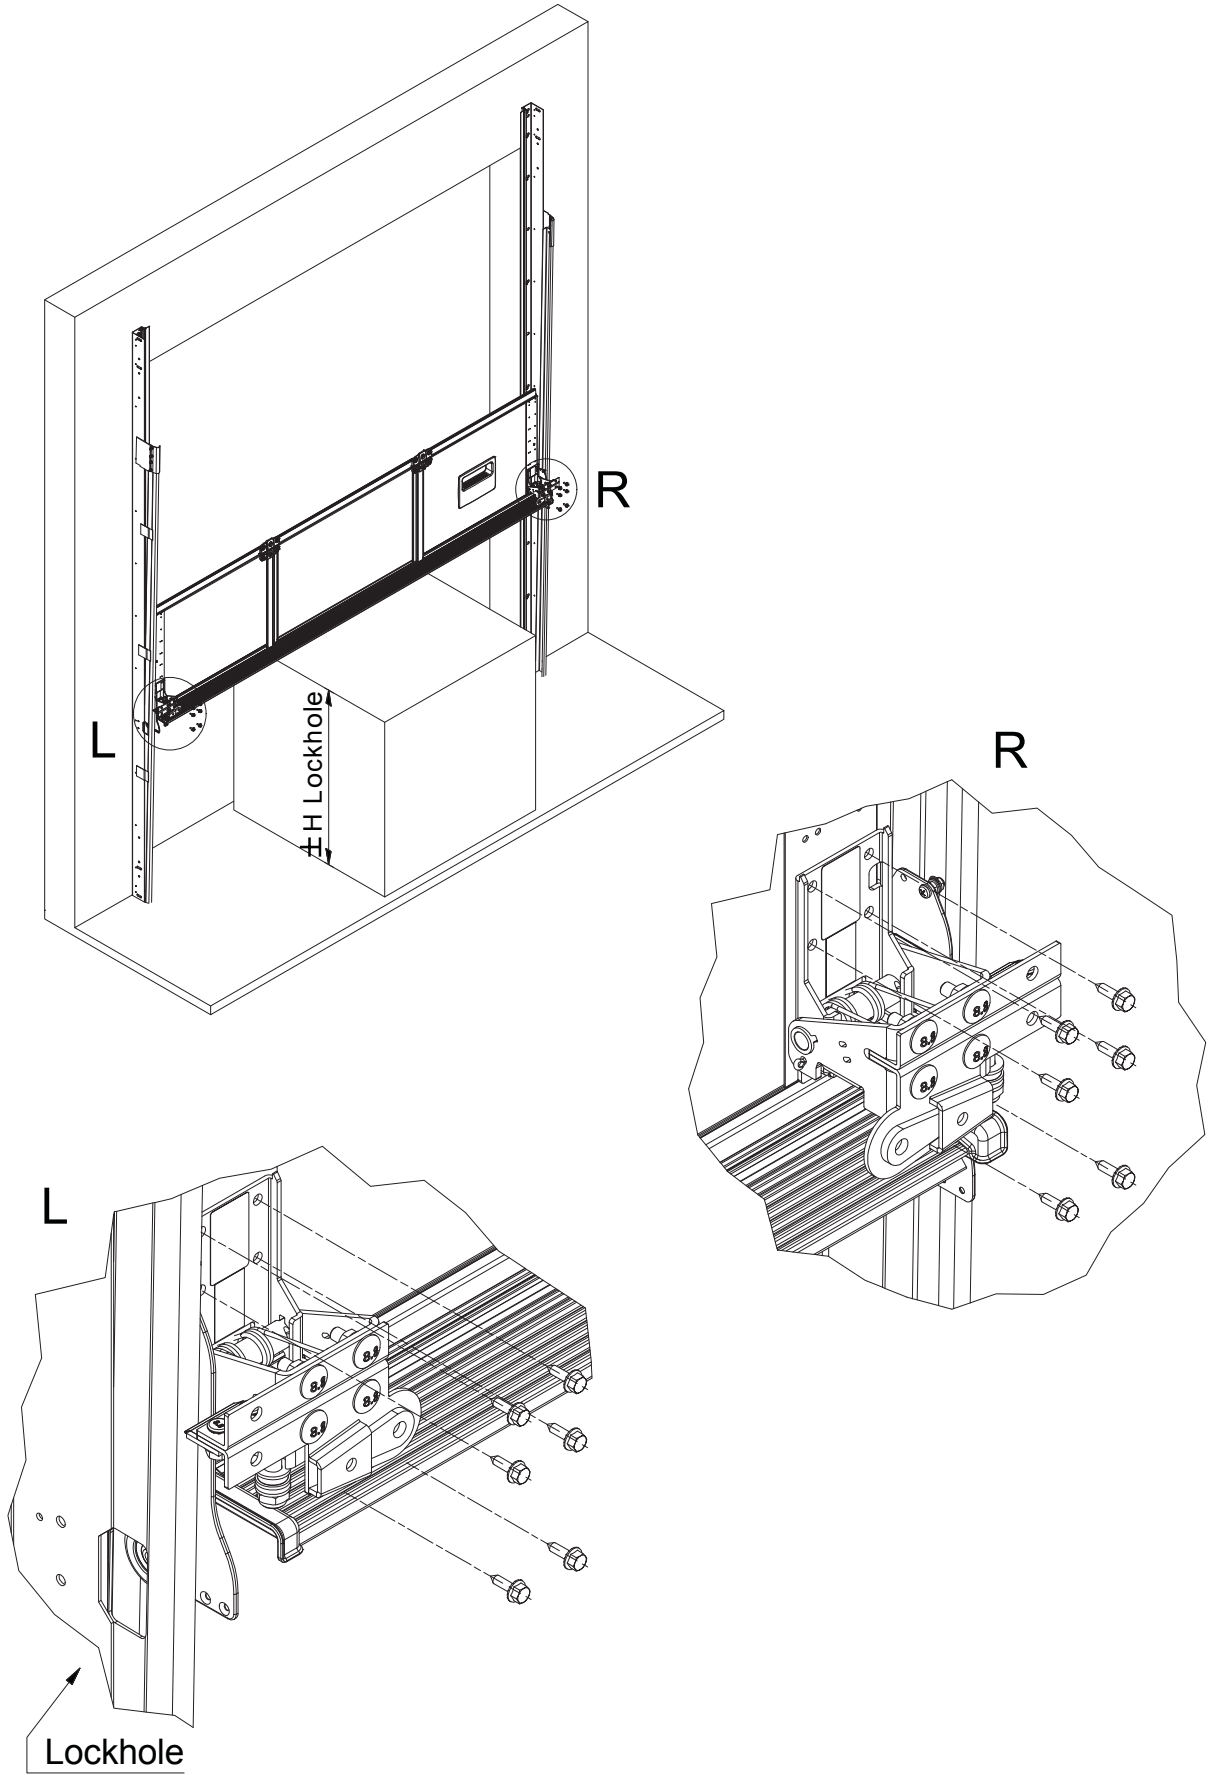


Installation Instruction  
Overhead sectional door  
Retractable Photocells

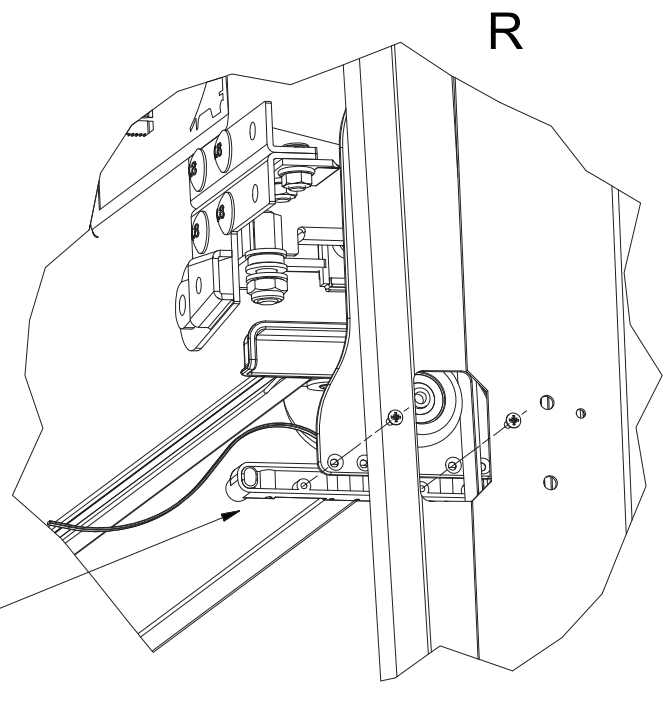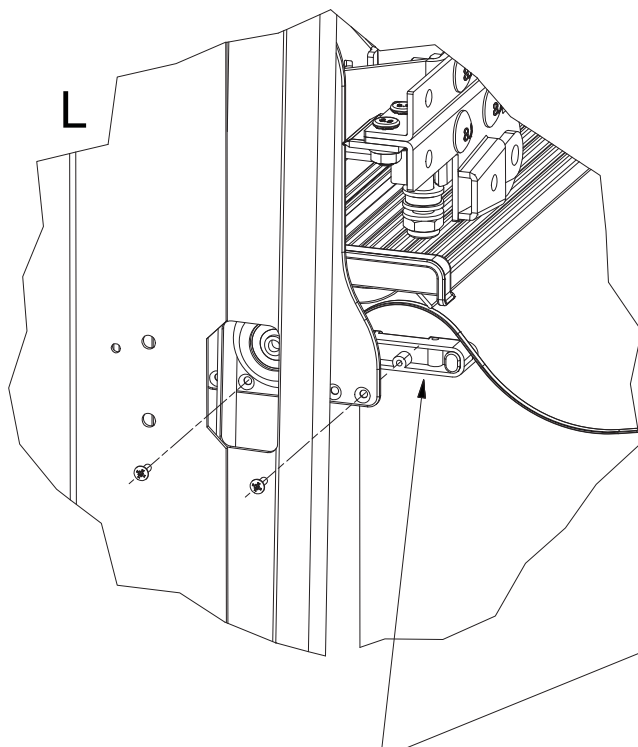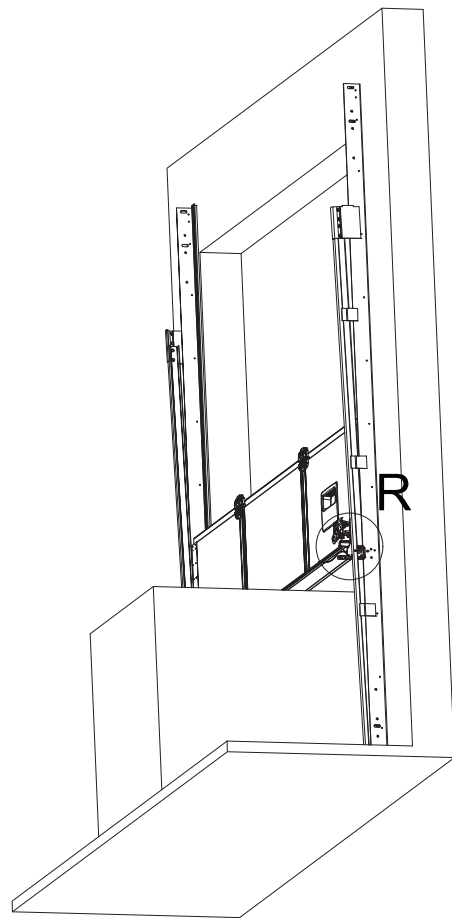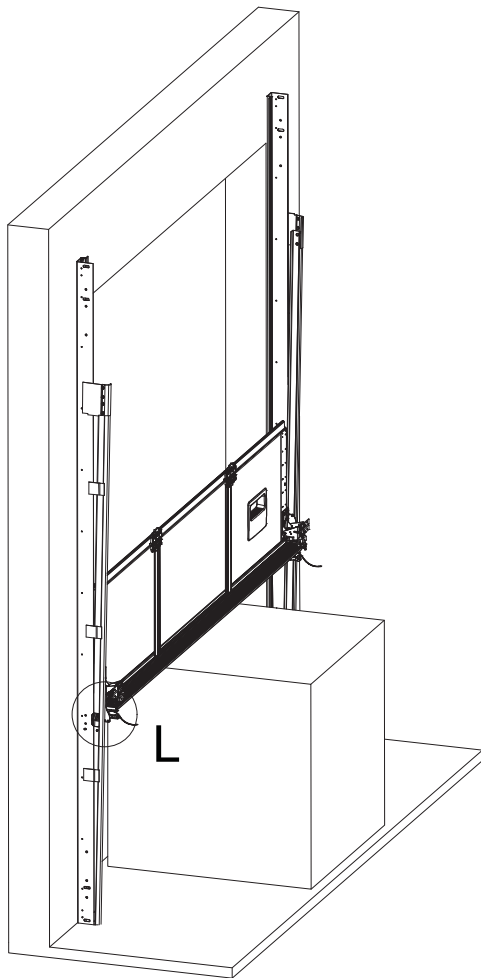


Photocell-bars (blue) are part of the safety set, packed in the operator box.

Installation Instruction  
Overhead sectional door  
Retractable Photocells

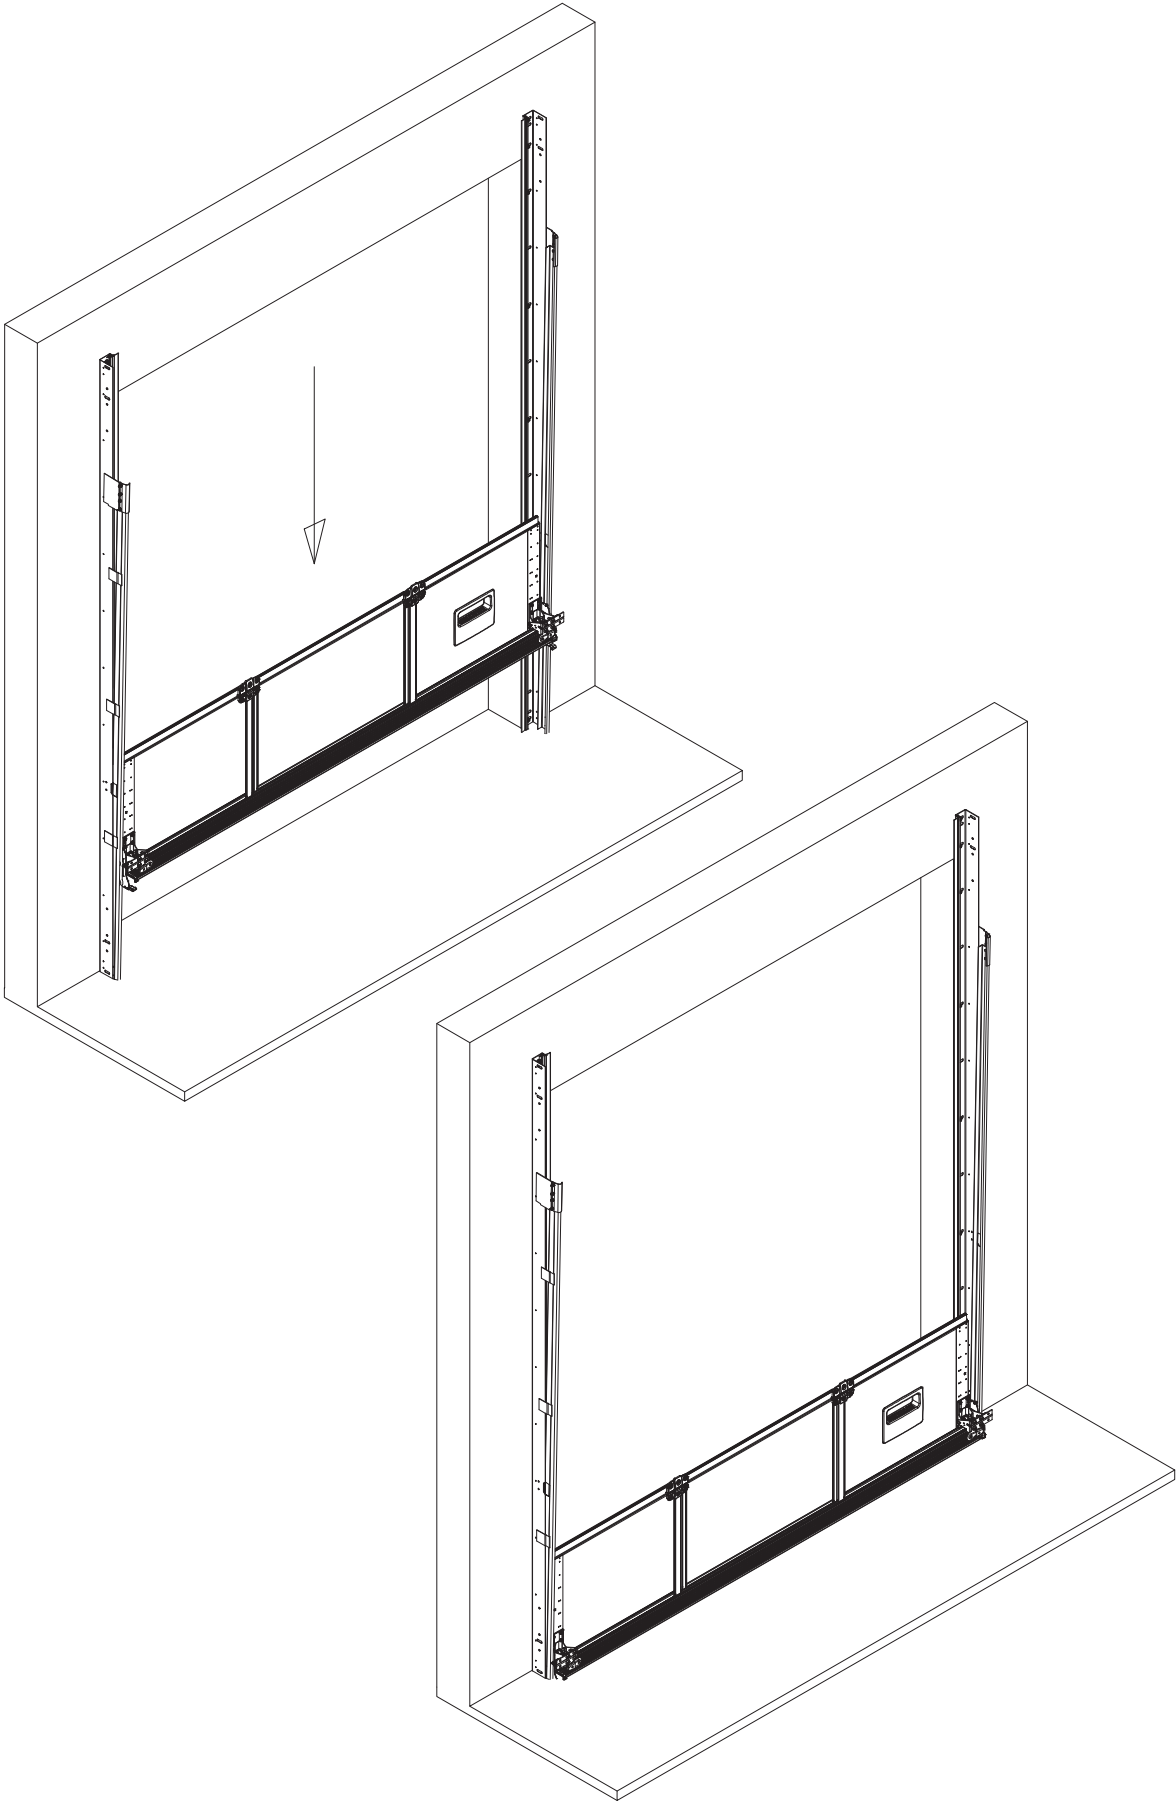

Installation Instruction  
Overhead sectional door  
Retractable Photocells

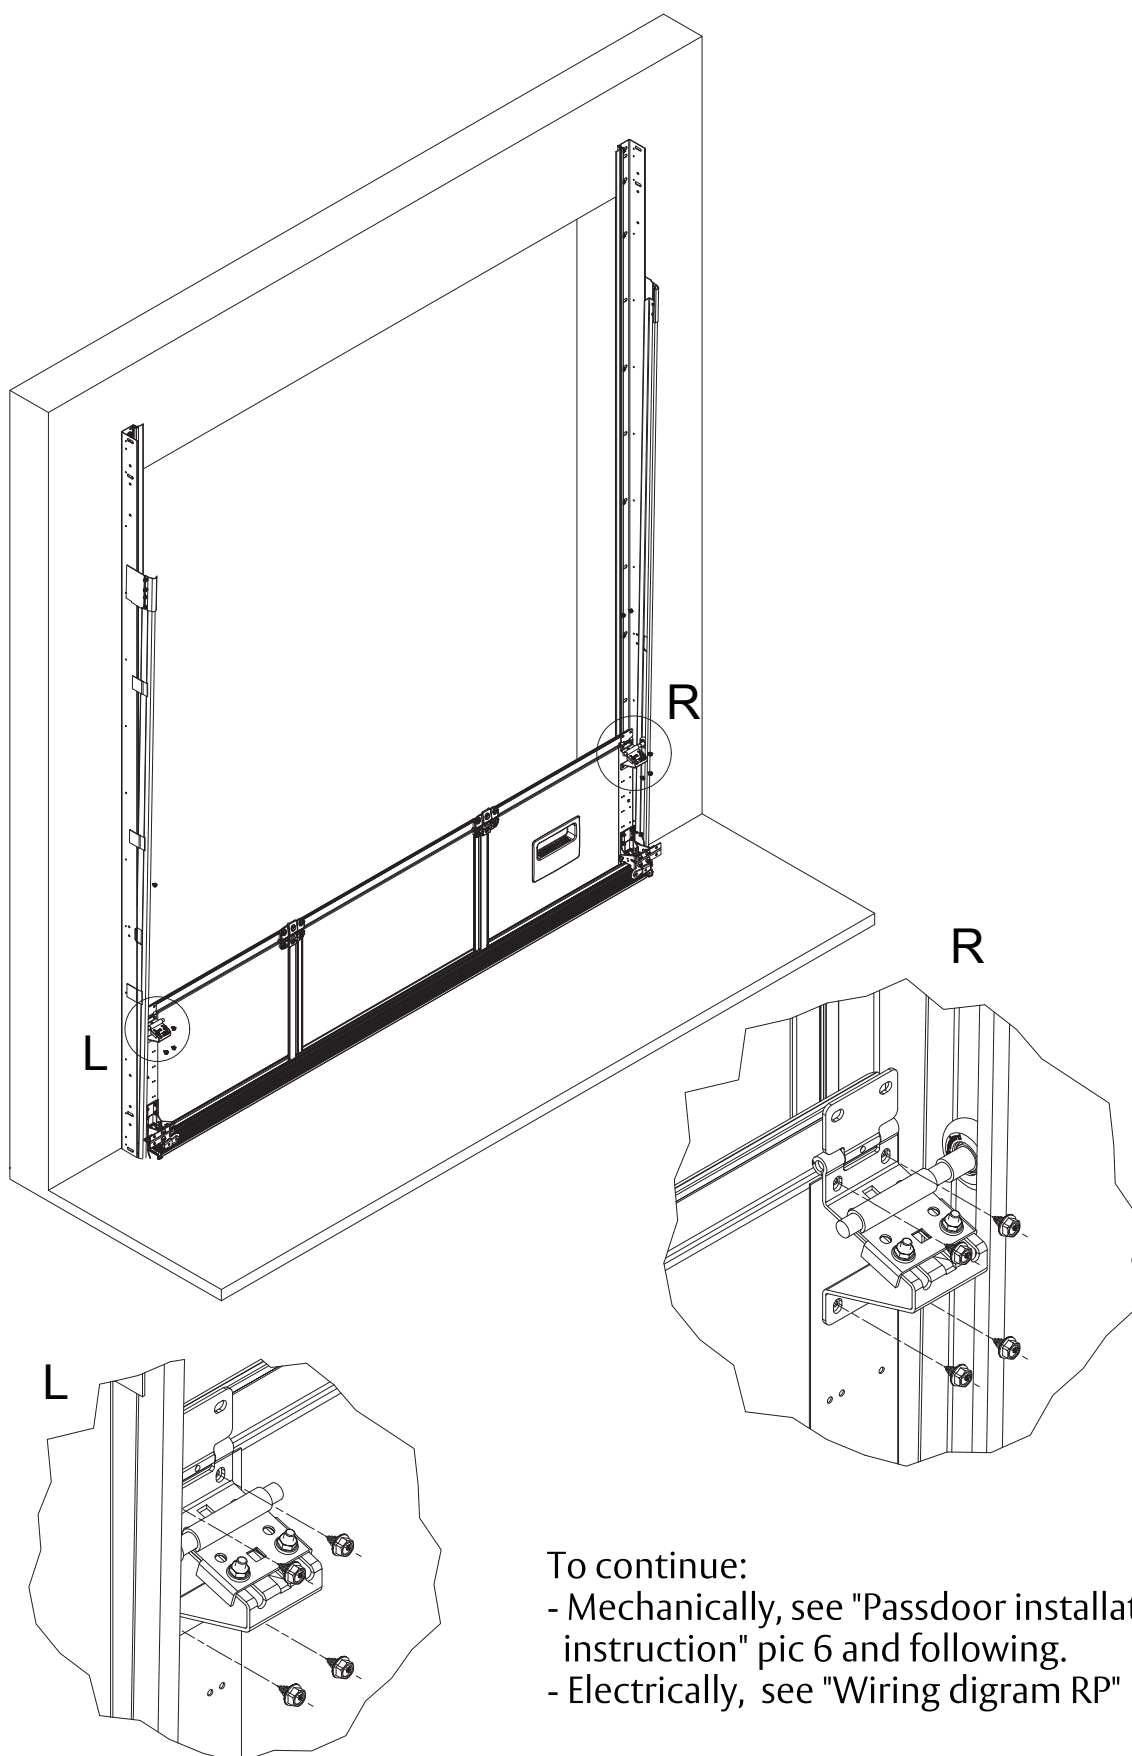

To continue:  
- Mechanically, see "Passdoor installation instruction" pic 6 and following.  
- Electrically, see "Wiring diagram RP"